



PAVER GRATE INSTALLATION


REFER TO POLYDRAIN INSTALLATION GUIDE
FOR CHANNEL INSTALLATION INSTRUCTIONS

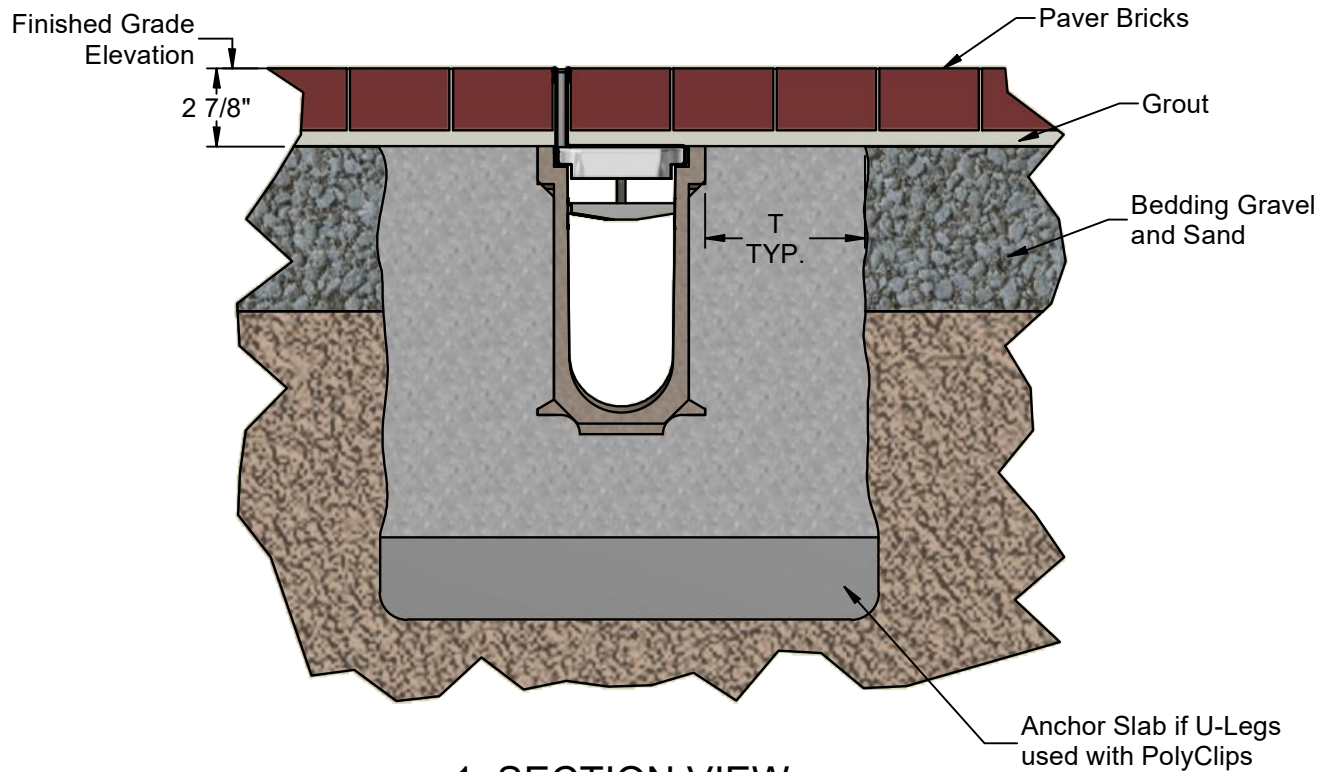


1. SECTION VIEW
T = Per Structural Engineer

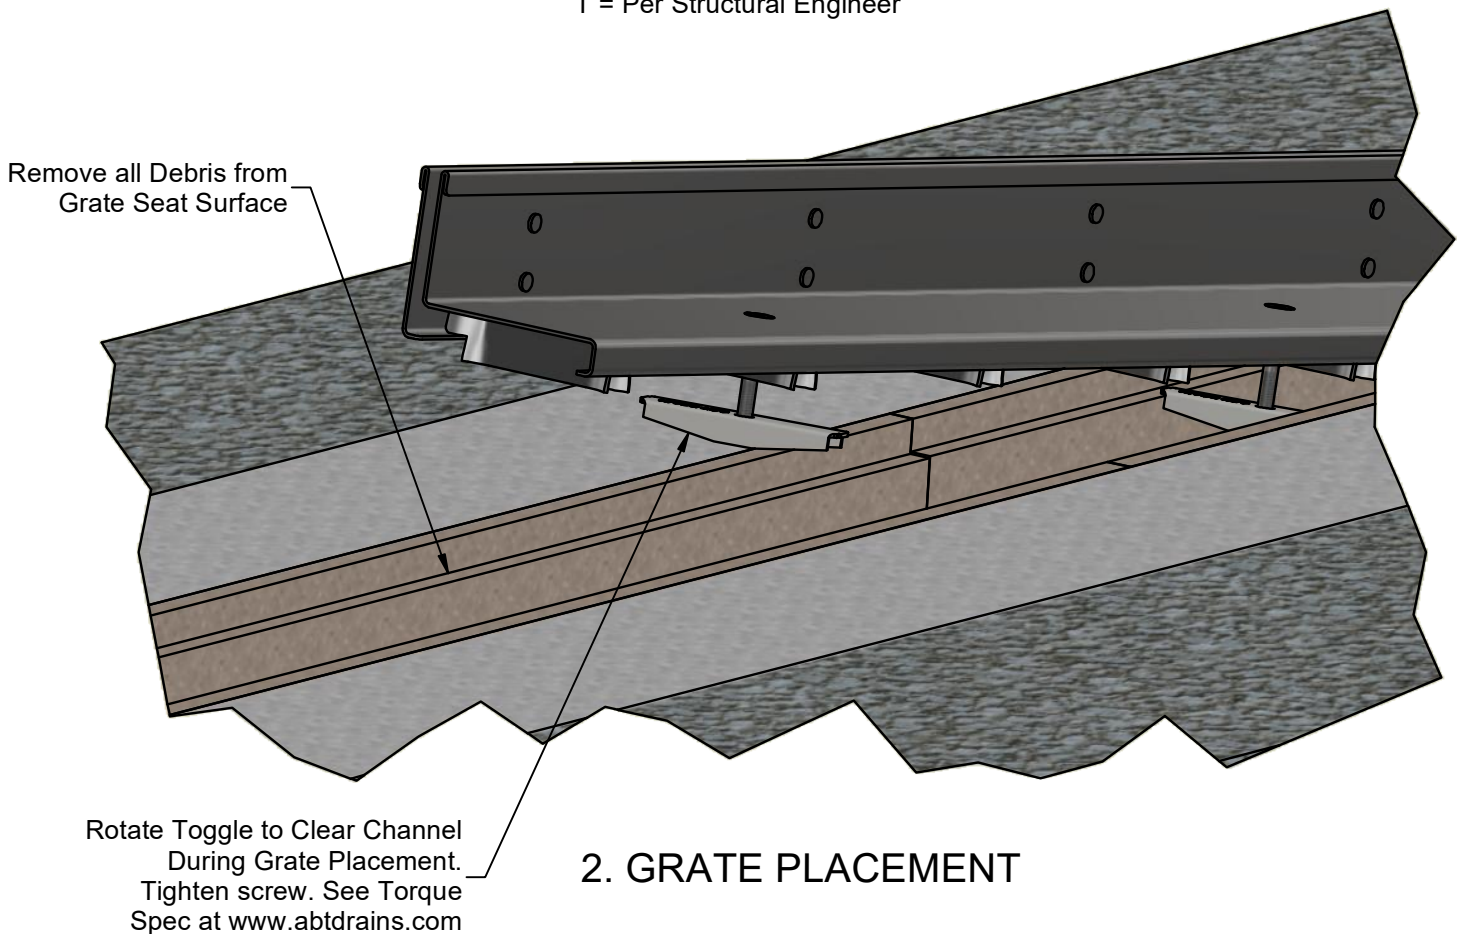

Position Clean Out Frame on
Top Edge of PolyDrain Channel.
Place Clean Out Grate Inside Frame


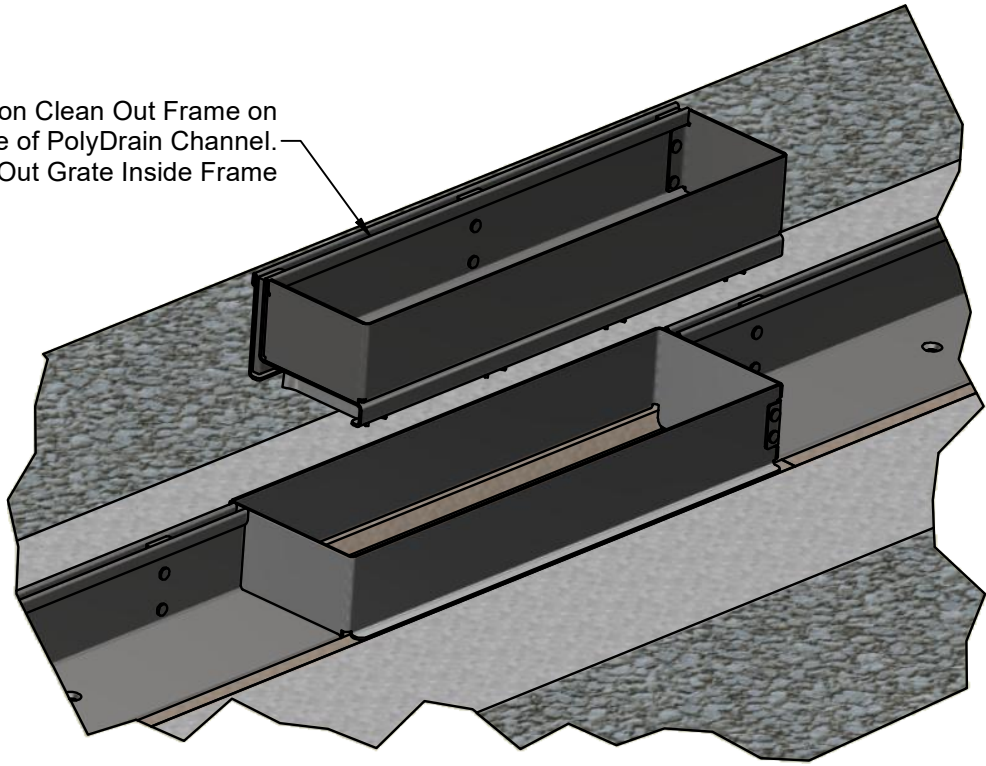


3. CLEAN OUT FRAME AND GRATE PLACEMENT

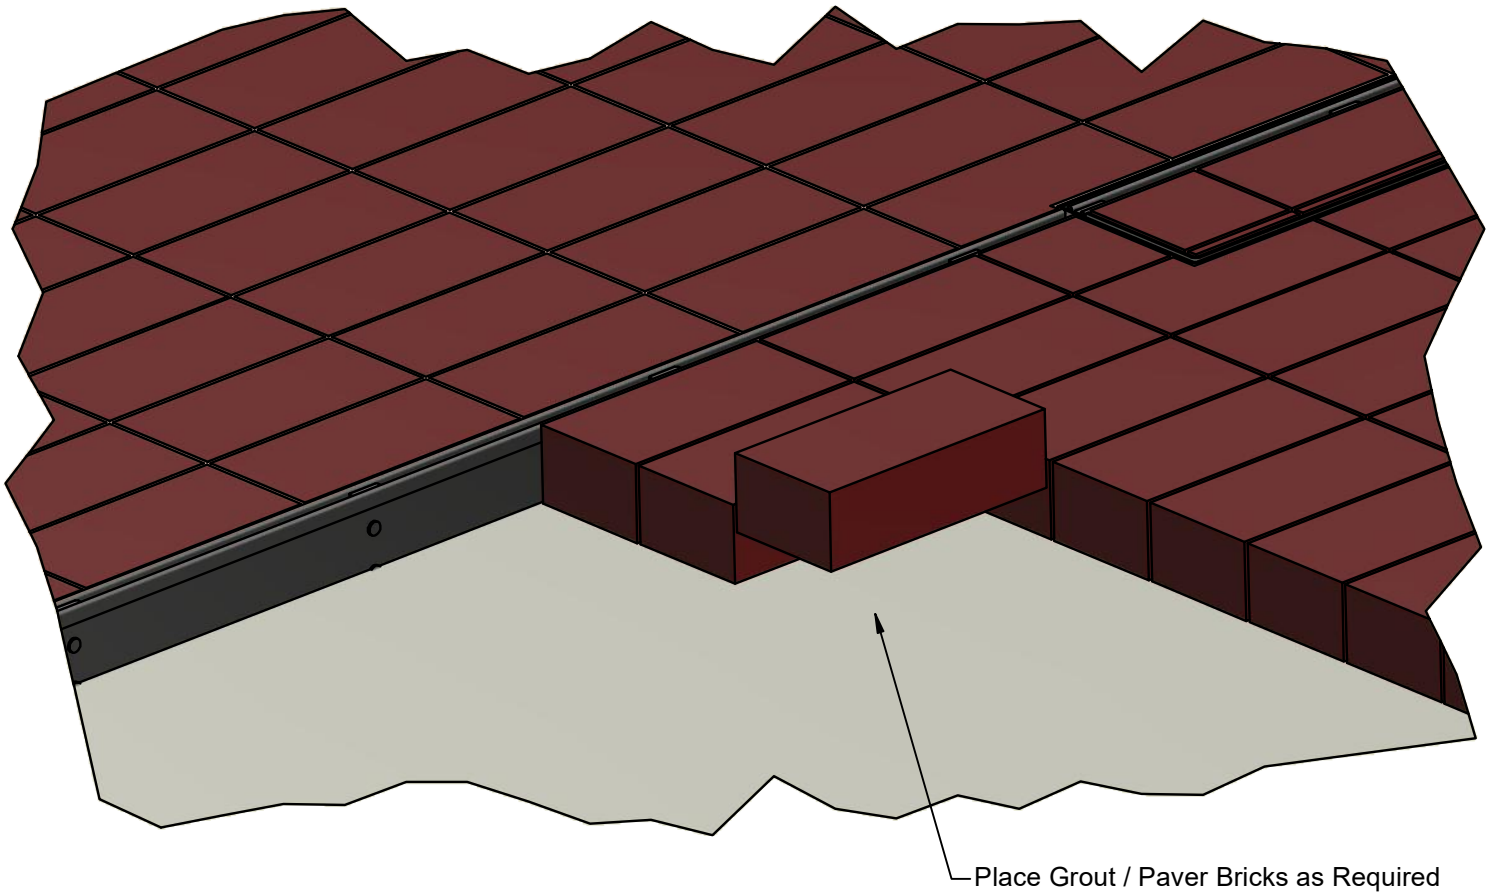

4. PAVER PLACEMENT

Clean Out Removal Tool

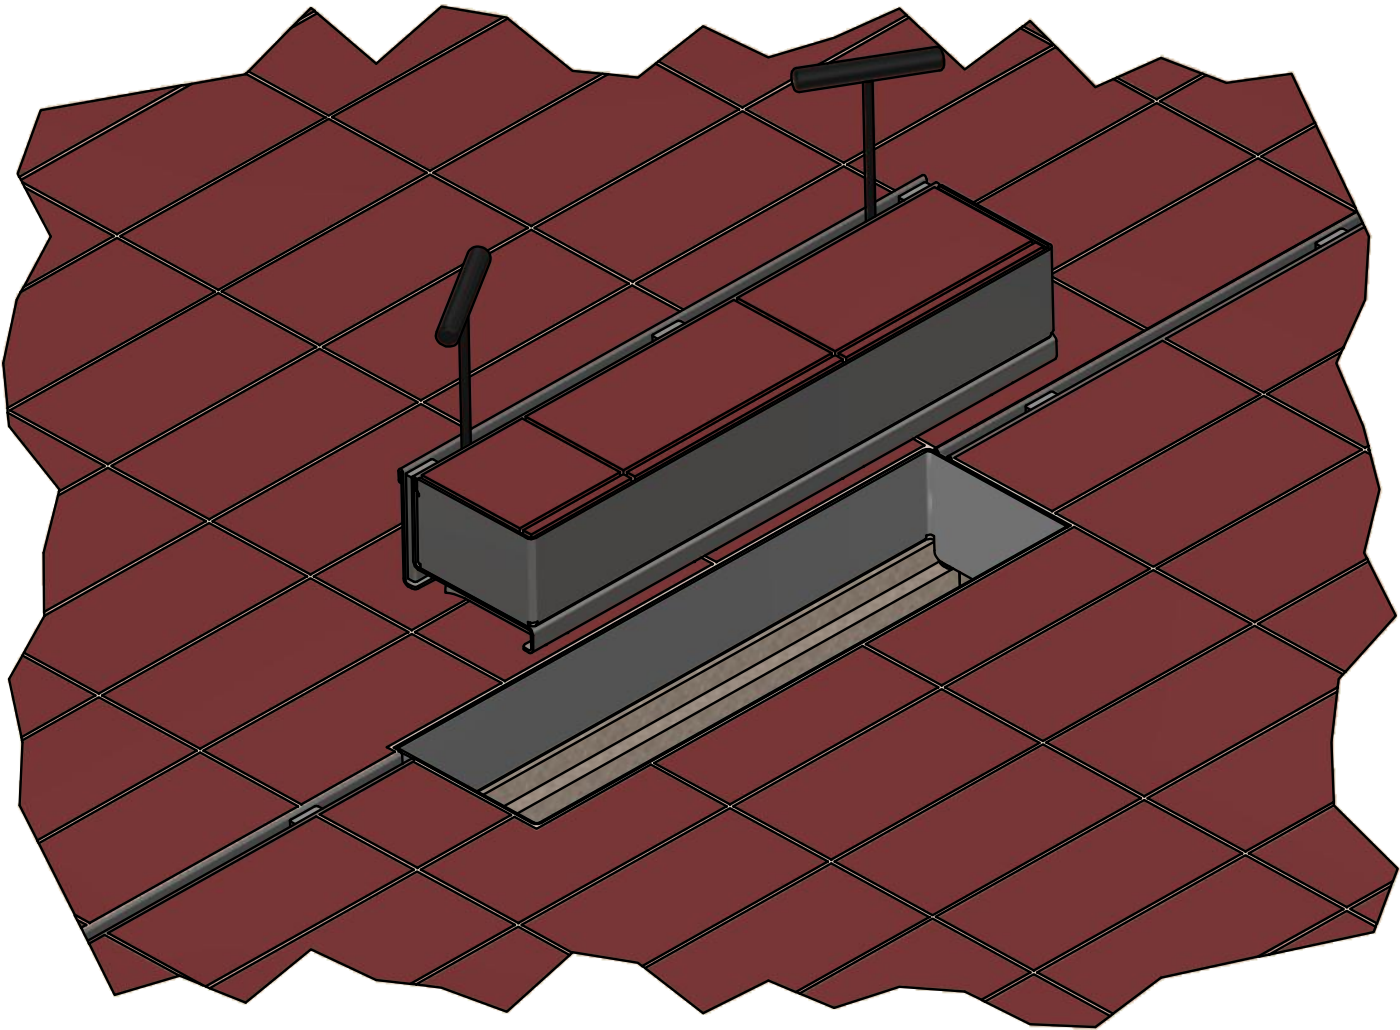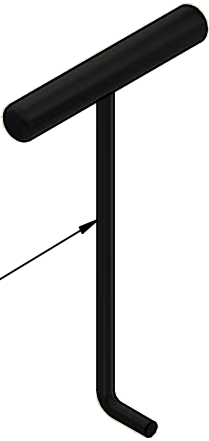

5. PAVER GRATE CLEAN OUT