



# STAINLESS FRAME INSTALLATION


REFER TO POLYDRAIN INSTALLATION GUIDE  
FOR CHANNEL INSTALLATION INSTRUCTIONS

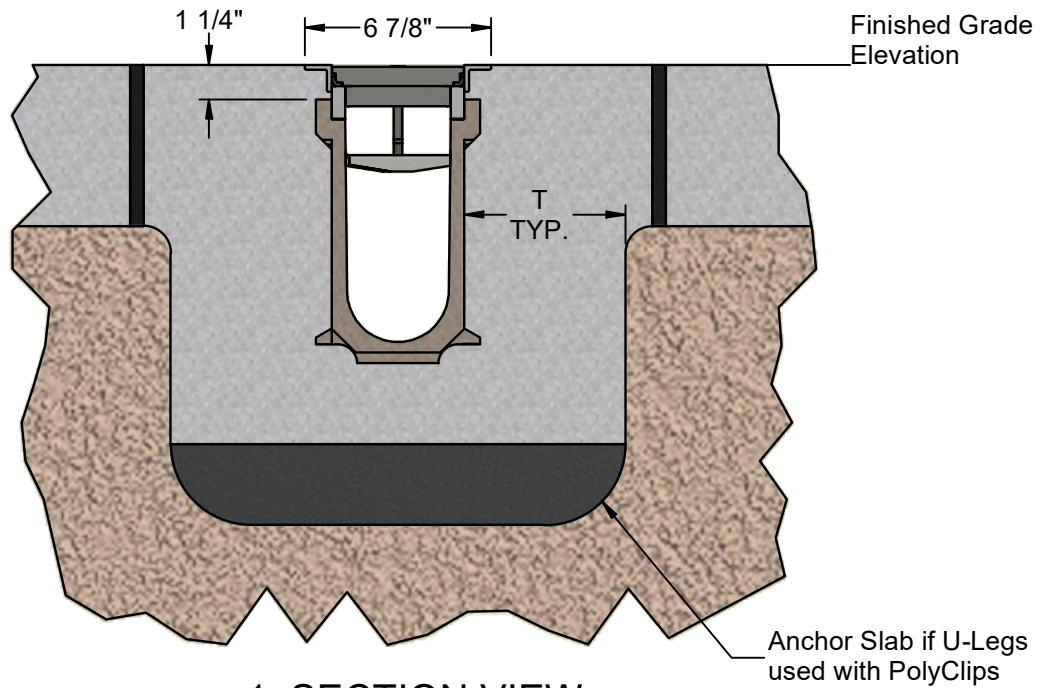

1. SECTION VIEW  
T = Per Structural Engineer

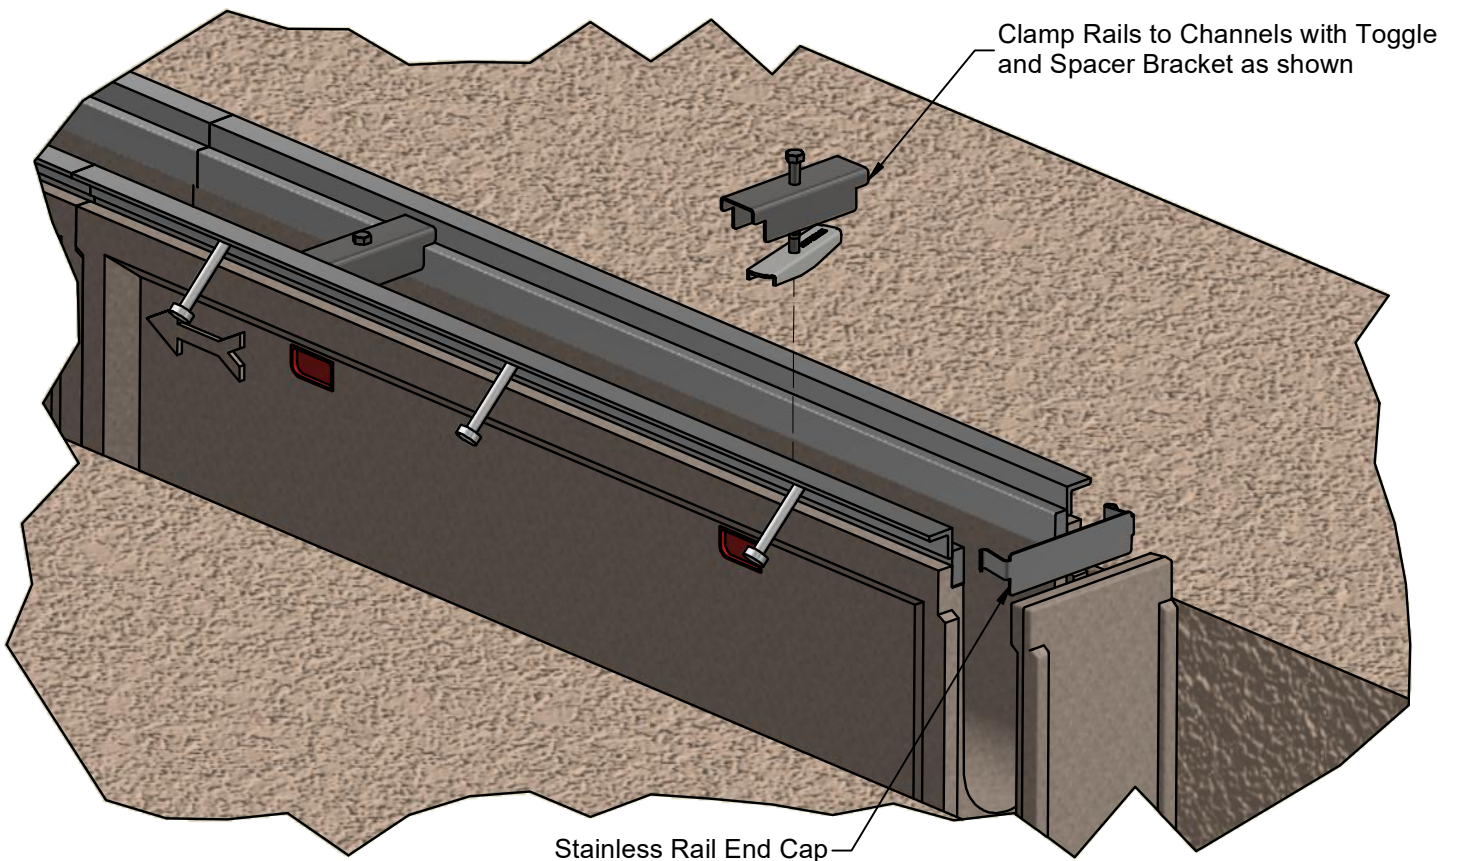

2A. RAIL & CHANNEL INSTALLATION WITH POLYCLIP OR BEDDING SLURRY  
REFER TO POLYDRAIN INSTALLATION GUIDE FOR MORE INFORMATION

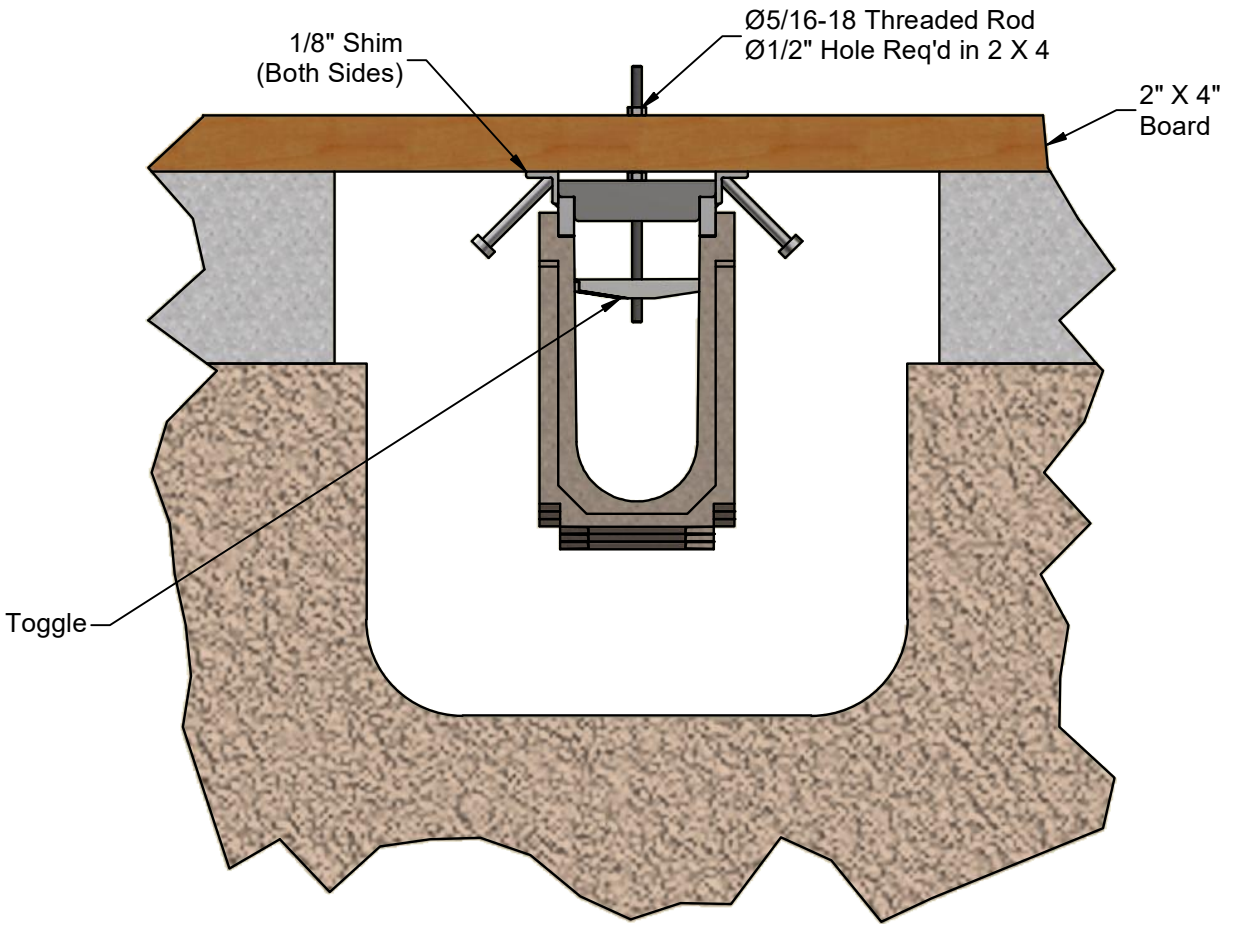

## 2B. RAIL & CHANNEL INSTALLATION BY SUSPENSION METHOD

